




### Installing Tubing

The ASIC/1-6100 with the 201155 airflow sensor does NOT require a filter. **The 201155 airflow sensor must be connected with 0.094" OD silicone tubing within the control enclosure.**

A 3/16"(0.187") barbed coupling is used to transition from the 3/32"(0.094") ID / 5/32"(0.156") OD silicone tubing to the 1/4"(0.25") FR Polyethylene plenum rated tubing used outside the enclosure. ASI offers a 201155 Sensor Tubing Kit, 201235, with 20 barbed fittings and 10 feet of silicone tubing sufficient to properly connect 10 airflow sensors.

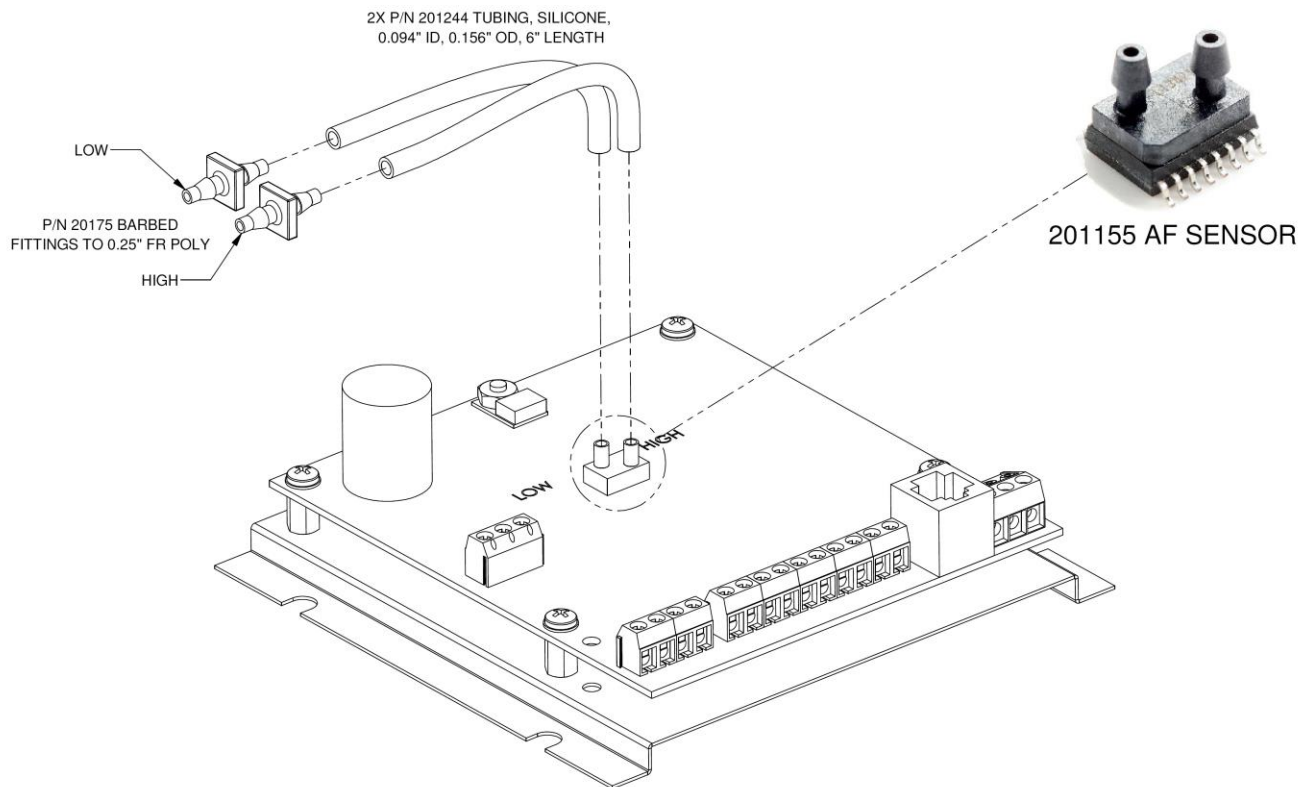

How to Order:	Order Number
VAV Airflow Sensor Tubing Kit	201235

If you have any further questions please contact: ASI Controls Technical Support, [support@asicontrols.com](mailto:support@asicontrols.com), or call 925-866-8808